## **User Manual for Installers**

SOLARMAN Business is the 3<sup>rd</sup> generation platform especially designed for PV monitoring and O&M. And this user manual will guide you to operate account registration, plant creation, device addition, and authorization.


Let's get started!

# **Account Registration**

If you do not have an account on SOLARMAN Business, please go to login page and register.[ https://pro.solarmanpv.com/login ]

## Step 1: Go to Login Page

Click "Register" as shown in the following page.

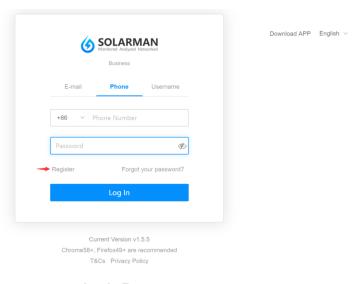


Login Page

## Step 2: Complete the Registration

## 1. Enter E-mail or Phone Number


- 1) Please enter a right E-mail or phone number, and verify it.
- 2) After verified its validity, please tick the box of T&Cs and Privacy Policy.

Tip: SOLARMAN Business supports registration via phone number and E-mail, users can click the button as shown in the following page to switch.

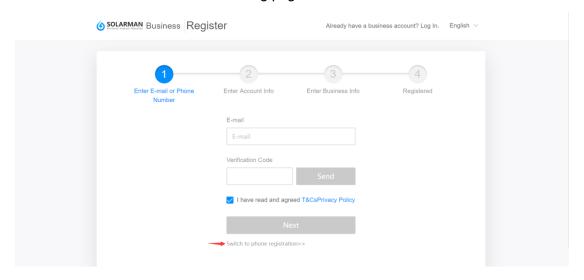


#### 2. Enter Account Info

If a new account is created on SOLRMAM Business, please complete the account information here.

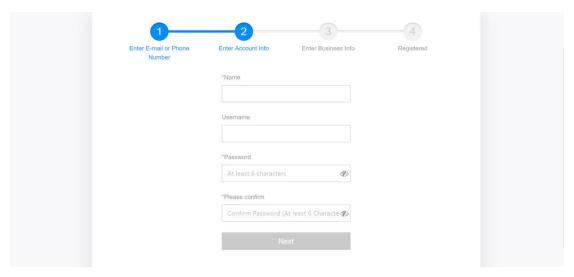


#### 3. Enter Business Info

Please select Business Type, Business Area, Service Type and enter Business Name here.

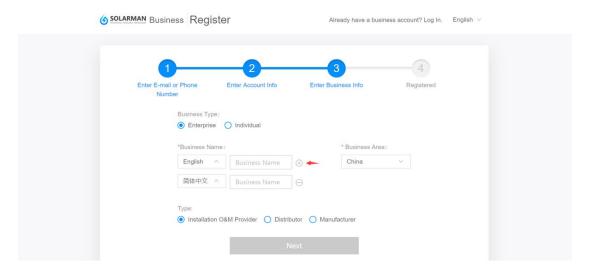

## 4. Registered


Please click the "Finished and Log in" button to skip to the login page, and log in.

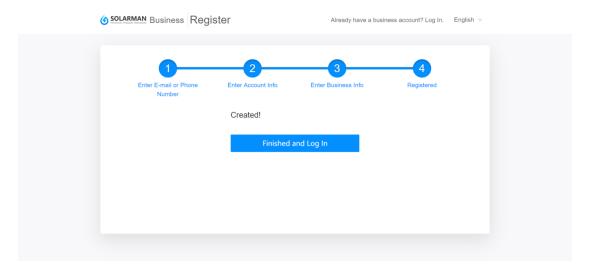

## Create a Plant

## Step 1: Go to Plants Page

Go to [Business] - [Plants] - [Create a Plant], or click the "⊕" in the upper-right corner and select "Create a Plant".

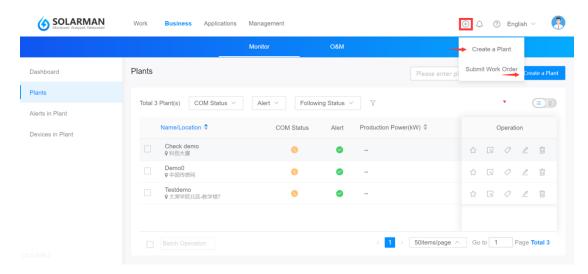


## Step 2: Enter Plant Info


Please enter the plant information here. The asterisked field are required.

#### 1. Basic Info

Please enter Plant Name, Plant Location, Coordinates and other basic info here.

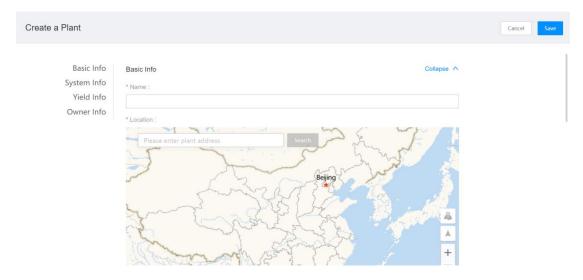

Go to Location field and search, system will automatically fill in the details according to what you enter.

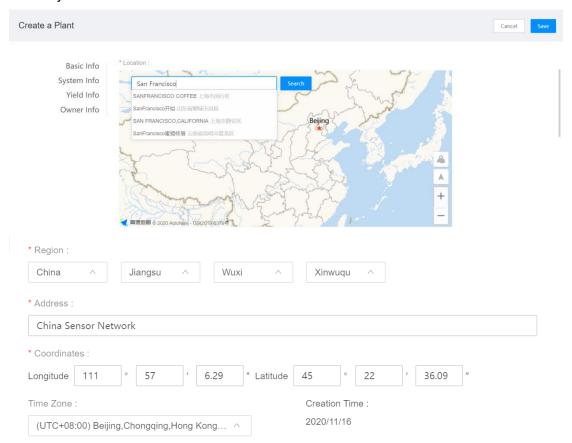

### 2. System Info

Please enter Plant Type, System Type, Capacity, Azimuth, Tilt Angle, and Commissioning Date here.


Notice: SOLARMAN Business will display plant layout according to System Type, and analyze plant data according to Capacity, please enter the fields correctly.



### 3, Yield Info and Owner Info


Please enter Yield Info and Owner Info here.

Notice: Please double check the Currency field cause it will influence yield calculation.

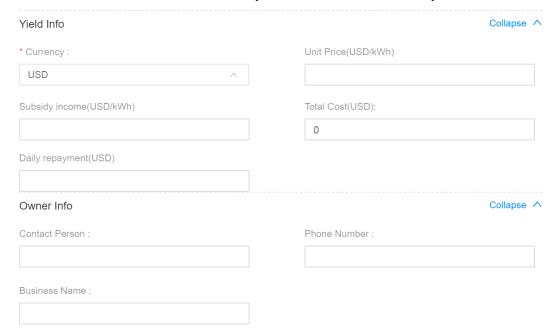


### 4. Created

After all plant information is entered, click "Save" in the upper-right corner to complete.

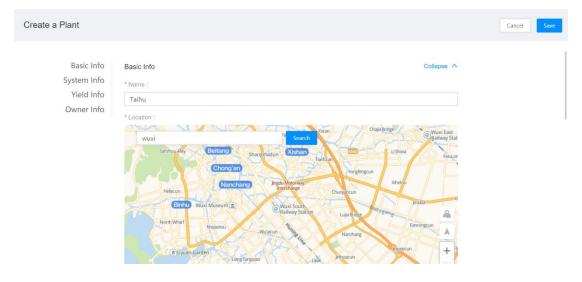


Tip: Users can directly add a device or operate authorization here.

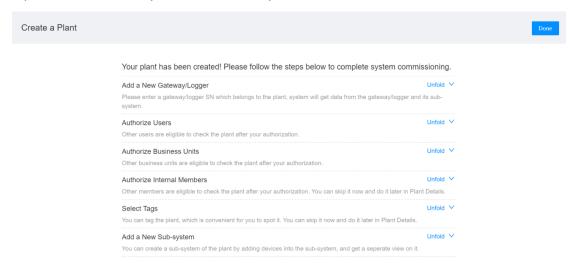


## Add a Device


Go to Add a New Gateway/Logger field and click "Collapse/Unfold" .

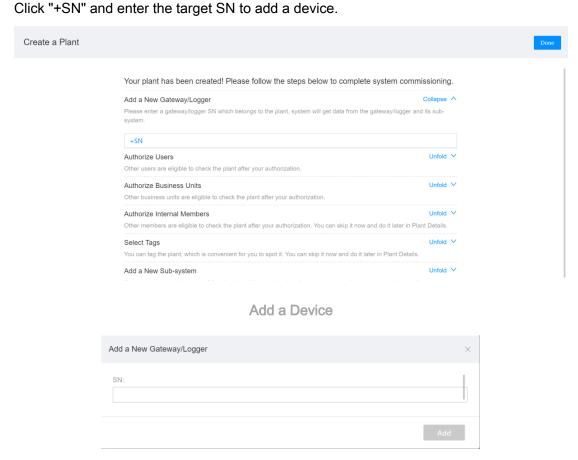

**Enter Device SN** 

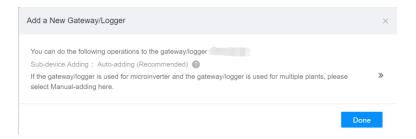

Done

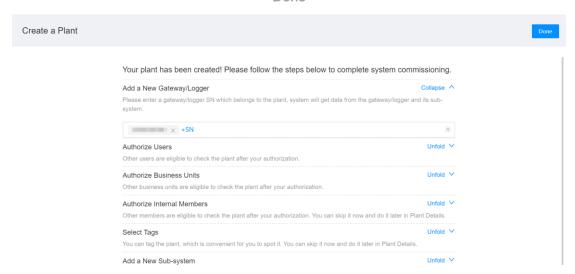

Tip: If the device is Logger (WiFi), network configuration is required. Please configure at SOLARAM Business App first.



### **SOLARMAN Business APP**


One-stop O&M, After Service Management Software

## **Authorization**

### 1. Create a New User


Go to Authorize Users field and click "Collapse/Unfold".

Click "+User" and create a new user.

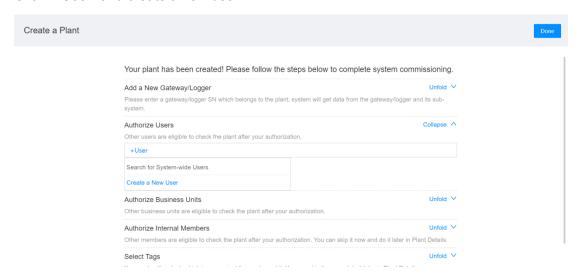

Please enter user information here and click "Save".


Notice: Users select authorized external role here.

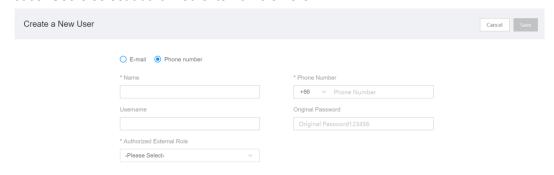


# 2. Search for System-wide Users

1.Go to Authorize Users field and click "Collapse/Unfold".


Click "Search for System-wide Users" to authorize.

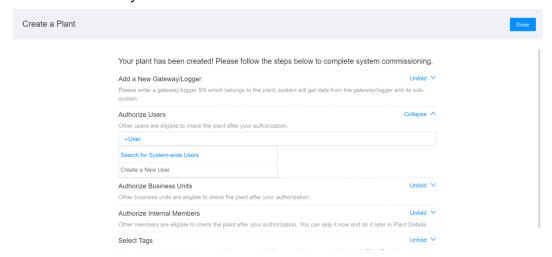

2.Enter the user information (e.g. name, E-mail, phone number) in the pop-up dialog to search for target user.

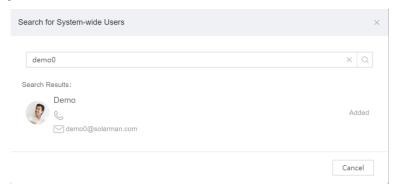

3. Select an external role and click "Save".

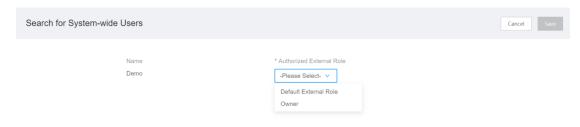

4.Click the "Done" in the upper-right corner to complete.

