

Enphase IQ 7, IQ 7+, IQ 7X

Component list

Enphase Microinverters and Monitoring



IQ7-60-2-INT

Enphase **IQ 7 Micro™**,
+350 Wc input power.



IQ7PLUS-72-2-INT

Enphase **IQ 7 Micro™**,
+440 Wc input power.



IQ7X-96-2-INT

Enphase **IQ 7 Micro™**,
+460 Wc input power.



ENV-S-WB-230-G

Enphase **Envoy-S™** communications gateway with basic PV production monitoring ($\pm 5\%$).
Compatible with M215, M250 and IQ 7-Series microinverters.



ENVOY-S-WM-230

Enphase **Envoy-S Metered™** communications gateway with integrated single-phase PV and consumption metering. Compatible with M215, M250 and IQ 7-Series microinverters.



CT-100-SPLIT

Enphase current transformer (CT). $\pm 2.5\%$ accuracy. Production and consumption monitoring. Accessory for Envoy-S Metered.

Enphase AC battery and Accessories



IQ7-B1200-LN-I-INT01-RVO

Enphase **AC Battery™**
270W/1.2 kWh, 230 VAC.



BWM-450MM-A

Enphase **Wall-Mount Bracket™**
487 mm (W) \times 311 mm (H)
(allow 450-mm battery-battery spacing)
Compatible with the Enphase AC Battery.

CELLMODEM-02 M

Enphase plug and play industrialgrade modem with five-year data plan for systems up to 60 microinverters. (Available where there is adequate mobile service in the installation area).



Enphase Q Relay



Q-RELAY-1P-INT

External relay acts as a grid monitoring and disconnection device. Automatically reconnects when valid grid conditions resume.
Single-phase



Q-RELAY-3P-INT

External relay acts as a grid monitoring and disconnection device. Automatically reconnects when valid grid conditions resume.
Three-phase